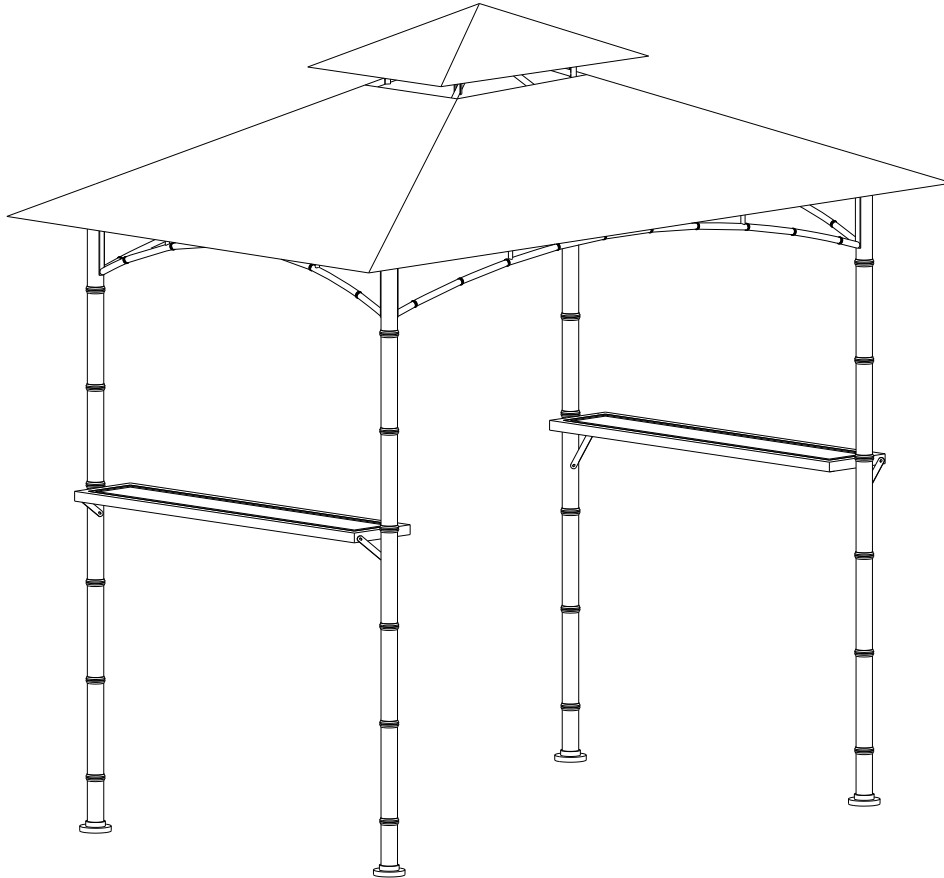


OWNER'S MANUAL

ITEM: L-GZ238PST-11A



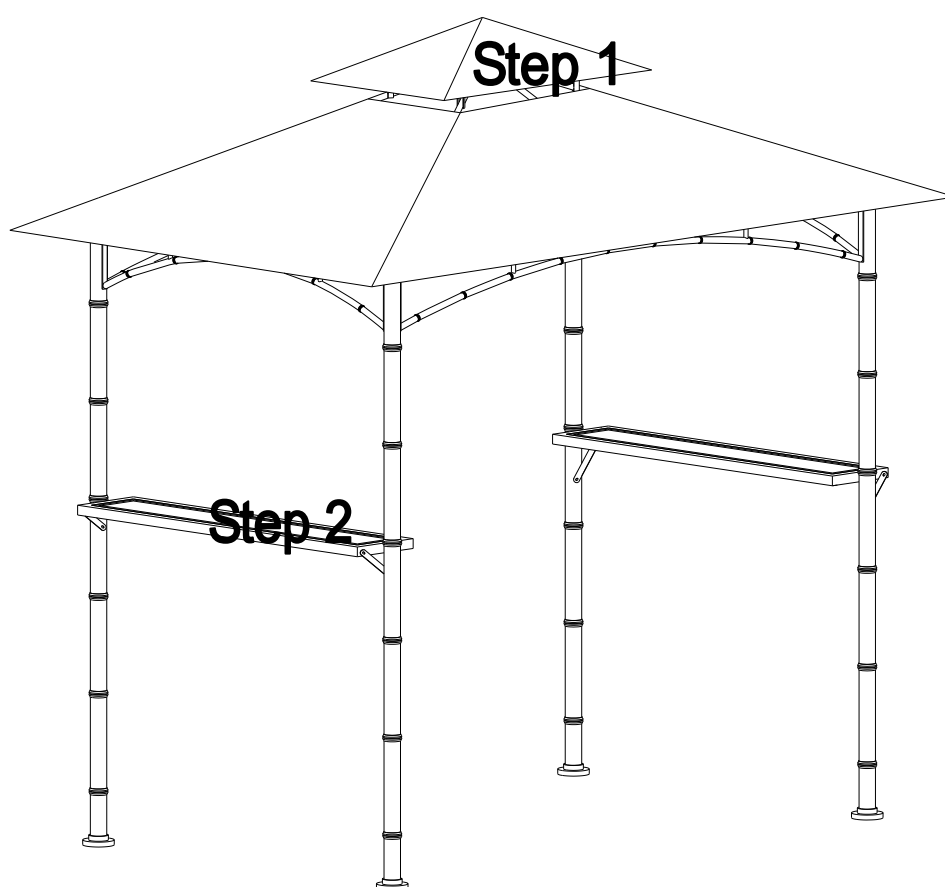
IMPORTANT:

Please read and follow all safety statements, warnings, assembly instructions, use & care directions before attempting to assemble.

 
 
 
 
 


 

 
 


1. When installing and assembling your gazebo, it is recommended that 2 or more adults are involved.
2. Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightening.
3. Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.
4. Do not leave the gazebo assembled when there is a risk of high wind, as possible damage will occur to the structure.
5. Never barbecue under this gazebo or use lanterns that contain naked flames.
6. This package contains small items and plastic bags that should be kept away from children.
7. Ensure that all connectors & poles are firmly secured in position fully. It is important to do so before use so as to avoid collapsing or damage to the item, which could result in injury.
8. WARNING: Keep flame and heat sources away from the gazebo fabric. The fabric may burn if it is exposed

to prolonged contact with a source of heat. The application of any foreign substance to the gazebo fabric may render the flame-resistant properties ineffective.

 

 

 
Tools required: Ladder, Hammer Screwdriver (not included)



Parts List

Pole 1	A1	2	
Pole 2	A2	2	
Long screen	B	2	
Small screen	C	2	
Corner top beam	D	4	
Big top connector	E	1	
Small top connector	F	1	
Small top bar	G	4	
Shelf	H	2	
Supporter	I	4	
Hook	J	1	
Small canopy	K	1	
Big canopy	L	1	

Hardware Pack 1

AA	M6X20 Bolt	16 PCS	
BB	M6 Flat washer	28 PCS	
CC	M6X40 Bolt	8 PCS	
DD	M6 Nut	8 PCS	
Z	M6 Wrench	1 PC	

Step 1

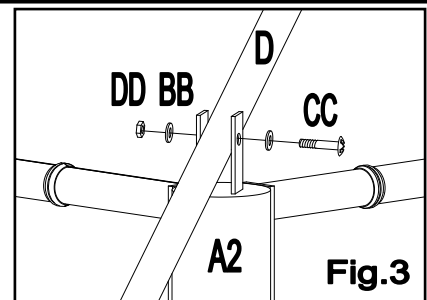
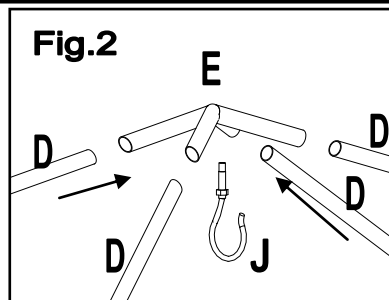
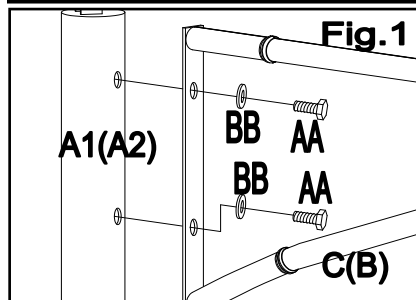
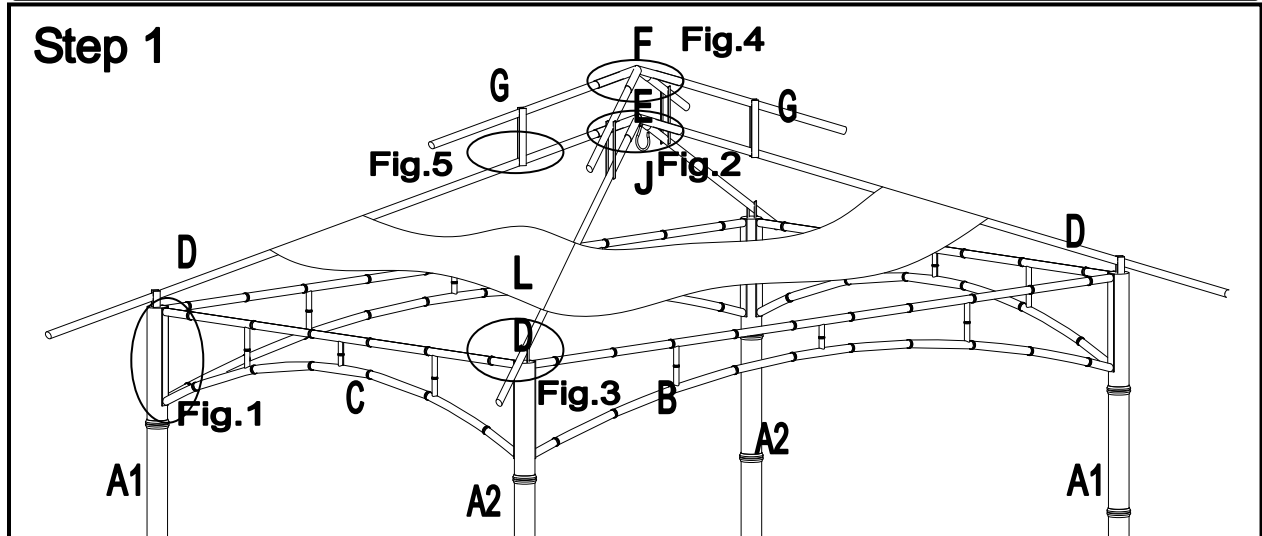


Fig.1: Attach Screen C (B) to Pole A1 (A2) by Bolt (AA) and Flat washer (BB).

Fig.2: Attach Hook (J) to Big top connector (E). Then insert Corner top beam (D) into Big top connector (E).

Fig.3: Connect Corner top beam (D) and Pole 2(A2) by Bolt (CC), Flat washer (BB), and Nut (DD).

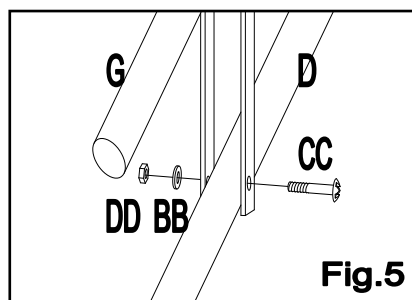
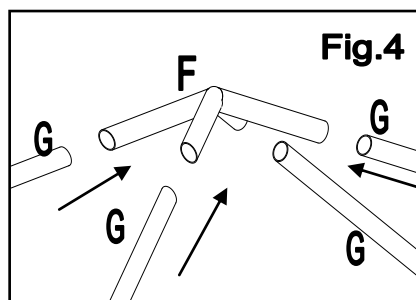
 

 
 


Fig.4: Insert Small top bar (G) into Small top connector (F).

Fig.5: First put the big canopy (L) onto the top of the gazebo (Do not fully spread). Then connect Small top bar (G) and Corner top beam (D) by Bolt (CC), Flat washer (BB), and Nut (DD).

Hardware Pack 2

EE	M6X20 Bolt	8 PCS	
BB	M6 Flat washer	8 PCS	
FF	Φ8X180MM Stake	12 PCS	
GG	Touch-paint	1PCS	

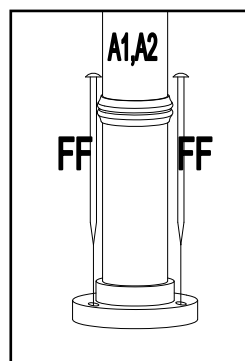
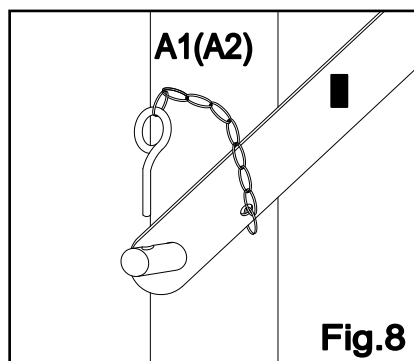
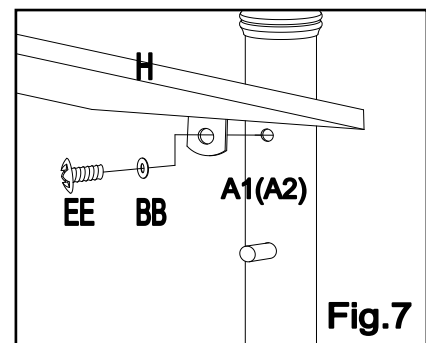
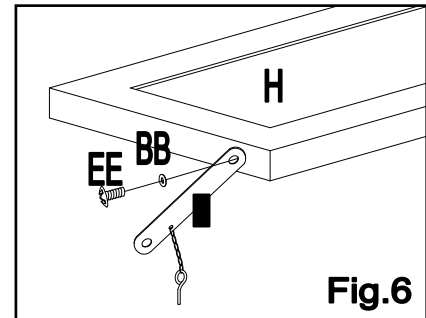
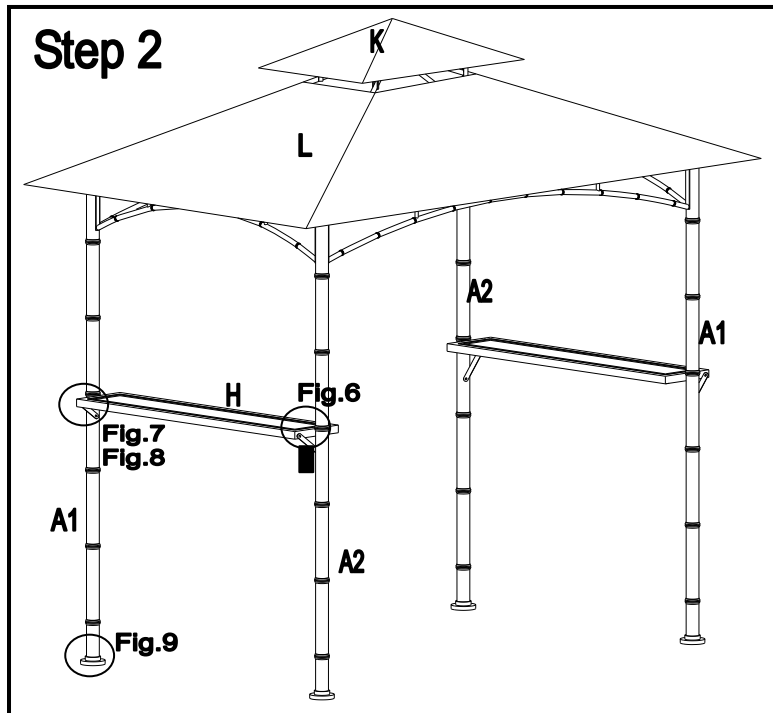


Fig.9

Fig.6: Attach Supporter (I) to Shelf (H) by Bolt (EE) and Flat washer (BB).

Fig.7: Attach Shelf (H to Pole A1 (A2) by EE and Flat washer (BB).

Fig.8: Fix Supporter (I) to Pole A1 (A2), then insert the pin on the pole into the hole at the end of the Supporter (I).

Fig.9: Using the Stake (FF) to fix up the Gazebo.

USE & CARE

1. This Gazebo is not a permanent structure and should be disassembled & stored away after use.
2. Do not repack your gazebo until completely dry.
3. This Gazebo must be assembled by two adults or more.
4. This Gazebo must not be left erect in windy conditions.

WARNINGS

1. Assembly Instructions must be followed.
2. Pegs supplied must be used to hold this gazebo in place when upright.
3. Warranty does not cover damage due to extreme weather conditions.

CUSTOMER SERVICE

Sunjoy Industries warrants to the original purchaser that this item is free from defects in workmanship and materials of your item provided the item was factory-sealed at the time of purchase and is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of **6 months**. Should any manufacturing defect arise within this warranty period, Sunjoy Industries will repair or replace (at our option) any defective merchandise upon proof of purchase; however, transportation and delivery costs, as well as labor and material charges to remove or replace parts, remain the responsibility of the purchaser. A purchaser of an "open box," previously-returned, or "clearance" item, as well as original purchasers outside of the warranty period, may obtain replacement parts from Sunjoy Industries for products in current production, at nominal cost.

If you are within the return policy that most stores have, you do have the option of returning this item back to the store which you bought it from for an exchange of the same item, or a refund of the purchase.

Important: For technical assistance on assembly or replacement parts. Please call Sunjoy Industries at 1(866) 578-6569 from 8:30 AM to 5:30 PM EST Monday to Friday or fax the replacement part form which is in the box to (740)-283-3549 or Email customer.care@sunjoydirect.com for assistance.